


FM Grinder

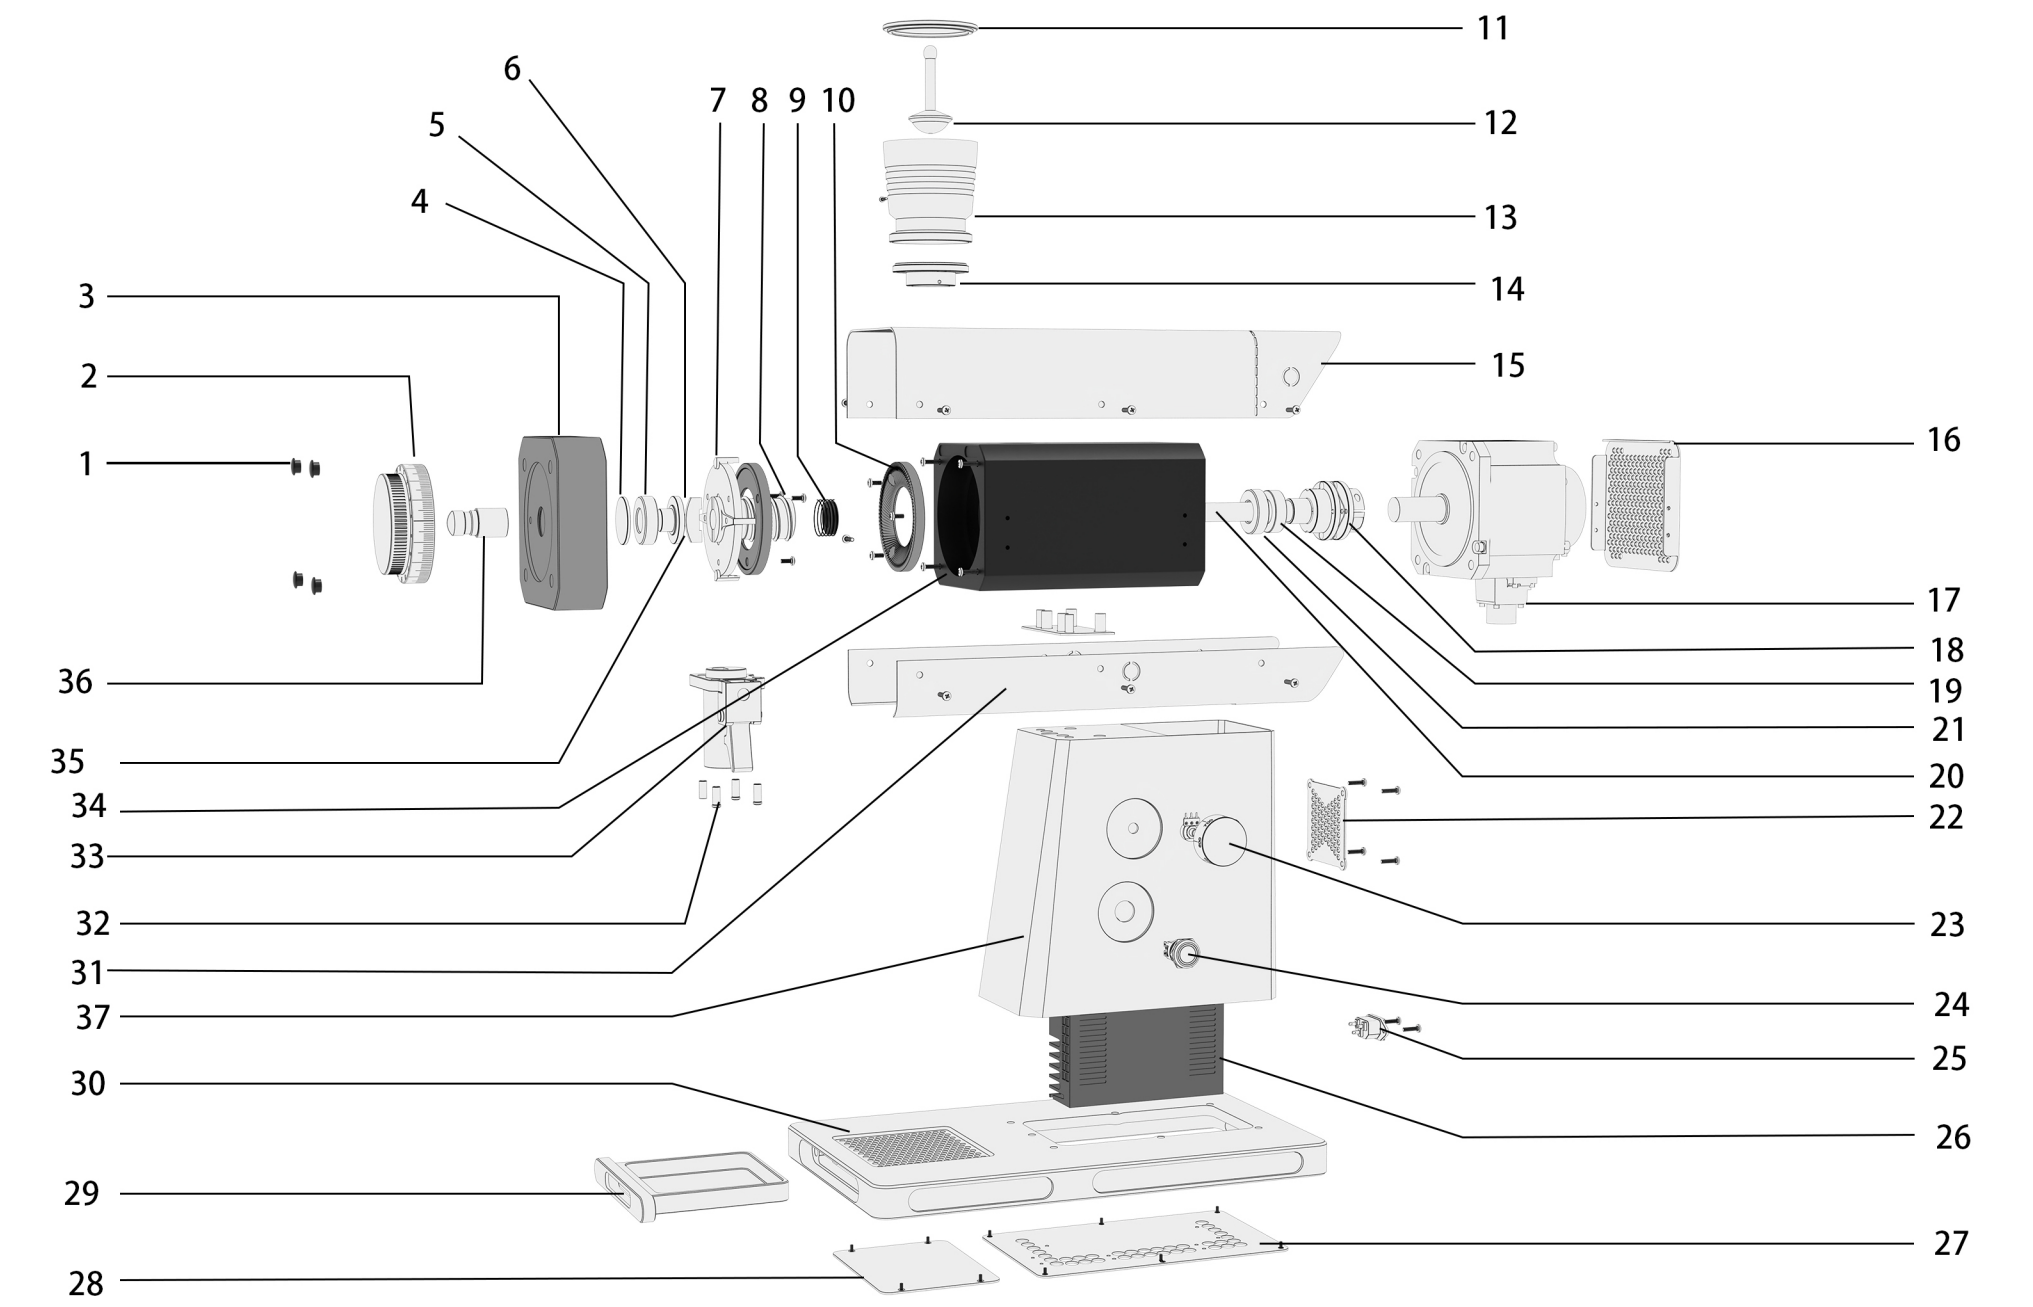

FM Grinder

序号	名称	序号	名称
1	螺丝盖	20	主轴
2	刻度盘	21	轴承垫圈
3	刻度盘固定块	22	散热网
4	轴承垫片	23	调速器
5	轴承	24	起停开关
6	轴承固定轴	25	主电源插座
7	刀架	26	驱动器
8	弹簧隔垫	27	驱动器固定板
9	弹簧	28	抽屉底盖
10	刀盘	29	咖啡粉抽屉
11	豆仓盖	30	主机底板
12	咖啡豆堵头	31	机仓下盖
13	豆仓	32	下粉管固定销
14	豆仓固定座	33	下粉管
15	机仓上盖	34	机仓
16	电机后盖	35	刀架固定块
17	伺服电机	36	调节粗细螺牙
18	联轴器	37	主机中座
19	轴承		

FM Grinder

序号	名称	序号	名称
1	Screw Cap	20	Main Shaft
2	Adjustment Dial	21	Bearing Washer
3	Dial Retaining Block	22	Cooling Vent Grill
4	Bearing Shim	23	Speed Controller
5	Bearing	24	Start / Stop Switch
6	Bearing Retaining Shaft	25	Main Power Socket
7	Burr Holder	26	Motor Driver
8	Spring Spacer	27	Driver Mounting Plate
9	Spring	28	Drawer Bottom Cover
10	Burr Set	29	Grounds Drawer
11	Bean Hopper Lid	30	Main Base Plate
12	Hopper Stopper	31	Housing Bottom Cover
13	Coffee Bean Hopper	32	Discharge Chute Retaining Pin
14	Hopper Holder	33	Discharge Chute
15	Housing Top Cover	34	Main Housing
16	Motor Rear Cover	35	Burr Holder Retaining Block
17	Servo Motor	36	Grind Adjustment Thread
18	Coupling	37	Main Housing Middle Frame
19	Bearing		